



5 Commonwealth Avenue, Woburn, MA 01801, USA  
1-800-858-5289  
[www.masconmedical.com](http://www.masconmedical.com)



**MASCON**  
MEDICAL

## OPERATION MANUAL



**Electrostatic Sprayer Gun**

**MMD169**

[www.masconmedical.com](http://www.masconmedical.com)



Dear customer:

Thank you for choosing the Mascon Medical Electrostatic Sprayer Gun. Please read the operating manual carefully before using this product and follow the instructions closely to ensure you get the best performance out of your machine. This operating manual will guide you on how to effectively use this product, ensuring the highest level of efficiency and safety.

We are committed to the constant optimization and improvement of this product's design, so we ask that you share any suggestions or feedback by emailing us at [feedback@masconmedical.com](mailto:feedback@masconmedical.com)



1. Important Safety Instructions.....	1
2. Important Safety Instructions for Battery Pack.....	4
3. Important Safety Instructions for Battery Charger and Battery Changing .....	5
4. Specific Safety Rules.....	6
5. Illustrated Parts.....	11
6. Technical Parameters.....	13
7. Electrostatic Working Principle.....	14
8. Operating Instructions.....	15
9. Changing the Nozzles.....	16
10. Safety Lock Instructions.....	17
11. Enabling Electrostatic Spraying.....	17
12. Symbols.....	18
13. Operation Safety.....	19
14. Cleaning The Unit.....	22
15. Maintenance.....	23
16. Assembly.....	25
17. Packing List.....	26









## 1. IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** To reduce the risk of injury, the user must read and understand the operation manual, fail to follow the manual may result in electric shock, a fire or explosion. When using electrical appliances, basic precautions should always be followed, including the following











**WARNING:** To reduce the risk of injury, user must read instruction manual. For use only with model GFD24-1681500U Class 2 Power Unit. For use only with 791-0411-00002 battery pack. Risk of electric shock. Do not expose to rain, store indoors. Use a specific fluid that has a flash point higher than 60 °C. No flammable liquids are allowed. For indoor and outdoor use, household use only

### READ ALL THE INSTRUCTIONS BEFORE USING THE APPLIANCE

-  To reduce the risk of electrical shock, do not put appliance in water or other liquid. Do not place or store appliance where it can fall or be pulled into a tub or sink.
-  To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
-  Only use attachments recommended or sold by the manufacturer.
-  Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
-  Do not touch moving parts.
-  Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing the appliance that is switched on can cause accidents.



MASCON  
MEDICAL

-  Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
-  Do not overreach. Keep proper footing and balance at all times. Proper footing and balance enables better control of the product in unexpected situations.
-  Keep the whole sprayer gun and dry, clean and free from oil and grease. Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any strong solvents to clean it.
-  Use this product in accordance with these instructions and in the manner intended, taking into account the working conditions and the word to be performed. Use of the product for operations different from those intended could result in a hazardous situation.
-  Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts.
-  Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.
-  Do not use oil-base or flammable formulations with this sprayer gun.
-  Do not use the sprayer gun if the switch does not turn it on or off. A cordless sprayer that cannot be controlled with the switch is dangerous and must be repaired or replaced.
-  This product uses lithium-ion (Li-ion) batteries. Local, state or federal laws may prohibit disposal of batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.
-  Do not stand in water or hold over water while operating this sprayer gun.
-  Store the product out of the reach of children and do not allow persons unfamiliar with the products or these instructions to operate the product.



MASCON  
MEDICAL



Do not operate the sprayer gun in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Products create sparks which may ignite the dust or fumes.



Keep bystanders, children, and visitors 50 ft. away from the area while operating the sprayer. Exposure to some chemicals can be hazardous.



Use safety equipment. Always wear goggles, gloves, facial masks for protection of eyes, skin and lungs against drifting spray and during mixing, filling, and cleaning.



Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.



Use the sprayer gun only with specifically designated battery packs, part no. 791-0411-00002. Use of any other battery pack may create a risk of injury and fire.



Do not use the sprayer gun when you are tired or under the influence of drugs or alcohol to avoid serious personal injury.



Know your chemical sprayer. Read and understand the operator's manual and observe the warnings and instruction labels affixed to the tool.



## 2. IMPORTANT SAFETY INSTRUCTIONS FOR BATTERY PACKS

The sprayer gun uses a 16.8 volt Lithium Ion battery pack. Before using the battery pack and charger, read the safety instructions below.

Ensure the switch is off before inserting battery pack. Inserting the battery pack into products that have the switch on invites accidents.

When battery pack is not in use, keep it away from other metal objects like: coins, keys, nails, paper clips, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause sparks, burns, or a fire.

Under harsh conditions, liquid may be ejected from the battery avoid contact. If contact accidentally occurs, flush area with water. If liquid contacts eyes immediately seek medical help. Liquid leaking from the battery may cause irritation or burns.

Do not attempt to disassemble the battery or remove any components projecting from the battery terminals. The battery and charger have no user serviceable parts. Fire or injury may result from tampering prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting.

Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.

The battery is recommended to be charged and stored at a temperature of 25+5° C and humidity of 60+15% and stored in a cool, dry and well ventilated area



### 3. IMPORTANT SAFETY INSTRUCTIONS FOR BATTERY CHARGER AND BATTERY CHARGING

Electrocution hazard. 120 volts are present at charging terminals. Do not probe with conductive objects.

Recharge only with the charger specified by the manufacturer. Part no : GFD24-168 1500U. A charger that is suitable for one type of battery pack may be a fire risk when used with another battery pack.

Do not allow any liquid to get inside charger.

Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.

Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way.

Disconnect the charger from the outlet before attempting any cleaning. This will reduce the risk of electric shock. Removing the battery pack will not reduce this risk.

The charger is designed to operate on standard household electrical power (120Volts) or (240) with proper country plug.

Use only the charger supplied by the manufacturer to recharge.

### 4. SPECIFIC SAFETY RULES



**DANGER:**

Risk of fire or explosion. Do not spray flammable liquids such as gasoline. Look for this symbol reference on the container.



**WARNING:**

Some spray created from products used with the sprayer contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Follow directions on containers of all such products. To reduce your exposure to these chemicals, wear approved safety equipment such as face masks that are specifically designed to filter out sprays, gloves, and other appropriate protective equipment.



**WARNING:**

Before filling the tank, always remove the battery pack. Wipe up any spills before inserting the battery pack. Following this rule will reduce the risk of electric shock and corrosive liquids entering the battery pack, which can cause battery pack failure including short circuit resulting in smoke, fire, and/or serious personal injury.



**WARNING:**

Do not allow conductive or corrosive fluids to get inside the battery pack. If conductive or corrosive fluids are spilled on the battery, refer to the instructions in your battery operator's manual.

- Before using any sanitizer or other spray materials in this sprayer, read the label on its original container thoroughly and follow its directions. Some spray materials are dangerous and should not be used in this sprayer, as they can damage the sprayer and cause serious bodily injury or property damage.
- Electric shock hazard. Never spray toward electrical outlets. Use with water-based cleaning and sanitizing solutions.

- Do not pour hot or boiling liquids into tank. These can weaken or damage the tubes or tank.
- Spray area must be well ventilated.
- Avoid spraying on windy days. Spray can be accidentally blown onto plants or objects that should not be sprayed.
- Store the sprayer in a secure, well-ventilated indoor space with the fluid tank empty.
- Do not use bleach or hydrogen peroxide.
- Do not use alcohol-based chemicals.
- Do not use powders or abrasive chemicals.
- Do not use caustic (alkali) or self-heating liquids in this sprayer.
- Do not point the sprayer nozzle in the direction of people or pets.
- Know the contents of the chemical being sprayed. Read all Safety Data Sheets (SDS) and container labels provided with the chemical. Follow the chemical manufacturer's safety instructions. It is a violation of federal law to use an EPA-approved disinfectant in a manner inconsistent with its labeling.
- Do not leave residue or spray material in the tank after using the sprayer. Clean after each use.
- Do not smoke while using the sprayer, or spray where spark or flame is present.
- To reduce the risk of fire or explosion use a liquid with a flash point higher than 140°F (60°C).
- Risk of injection. Do not discharge directly against skin.
- To reduce the risk of electric shock, do not put the sprayer into water or other liquid.

- Do not place or store the sprayer where it can fall or be pulled into a tub or sink.
- Maintain this product. Thoroughly inspect both the inside and outside of the sprayer and examine the components before each use. Check for cracked and deteriorated tanks, leaks, clogged nozzles, and missing or damaged parts. If damaged, have the product repaired before use. Many accidents are caused by poorly maintained products.
- Disconnect the battery from the unit before draining, cleaning, or storing the sprayer. Such preventive safety measures reduce the risk of accidental starting.
- Always wear eye protection with side shields or goggles marked to comply with ANSI Z87.1. Failure to do so could result in fluids entering your eyes resulting in possible serious injury.
- Protect your lungs. Wear a face or dust mask when using the sprayer. Following this rule will reduce the risk of serious personal injury. Follow the chemical manufacturer's safety instructions and guidelines listed on the SDS sheet.
- Battery tools do not have to be plugged into an electrical outlet; therefore, they are always in operating condition. Be aware of possible hazards when not using your battery tool or when changing accessories. Remove battery pack when tool is not in use. Following this rule will reduce the risk of electric shock, fire, or serious personal injury.
- Do not place battery tools or their batteries near fire or heat. This will reduce the risk of explosion and possibly injury.

- Do not crush, drop or damage battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow. A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.
- Batteries can explode in the presence of a source of ignition, such as a pilot light. To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. An exploded battery can propel debris and chemicals. If exposed, flush with water immediately.
- Do not charge battery tool in a damp or wet location. Following this rule will reduce the risk of electric shock.
- Under extreme usage or temperature conditions, battery leakage may occur. If liquid comes in contact with your skin, wash immediately with soap and water. If liquid gets into your eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention. Following this rule will reduce the risk of serious personal injury.
- Do not use battery-operated appliance in rain.
- Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns
- Do not dispose of the battery(ies) in a fire. The cells may explode. Check with local codes for possible special disposal instructions.
- Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.

- Avoid Dangerous Environment - Don't use appliances in damp or wet locations.
- Use Right Appliance - Do not use appliance for any job except that for which it is intended.
- Don't Force Appliance - It will do the job better and with less likelihood of a risk of injury at the rate for which it was designed.



**WARNING:**

Chemicals and chemical fumes can be hazardous and cause serious injury, permanent damage or death if ingested, inhaled or splashed in eyes or on skin. Follow the chemical manufacturer's safety instructions and guidelines listed on the SDS sheet.



**CAUTION:**

To reduce the risk of electric shock, do not touch the nozzle during use.



**CAUTION:**

Keep all body parts out of the spray pattern.



**WARNING:**

When spraying surfaces with the electrostatic function enabled, a charge could build up on the surface potentially resulting in a static shock to the user. Carrying a conductive item (such as a key) to touch a conductive surface and dissipate the charge is recommended.


## SAVE THESE INSTRUCTIONS

## 5. ILLUSTRATED PARTS

1. Headlight
2. Nozzle
3. Nozzle Cover
4. Tank Release
5. Tank
6. Trigger Switch
7. Battery Holder
8. Grounding Strap
9. Safety Lock
10. Electrostatic Switch
11. LCD Screen
12. DC Jack
13. Battery Release
14. DC Plug of Charger
15. Battery Pack
16. Water Tube
17. Extra Nozzles (40 Microns)



17

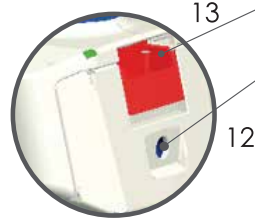

13

12



10


11



14



15

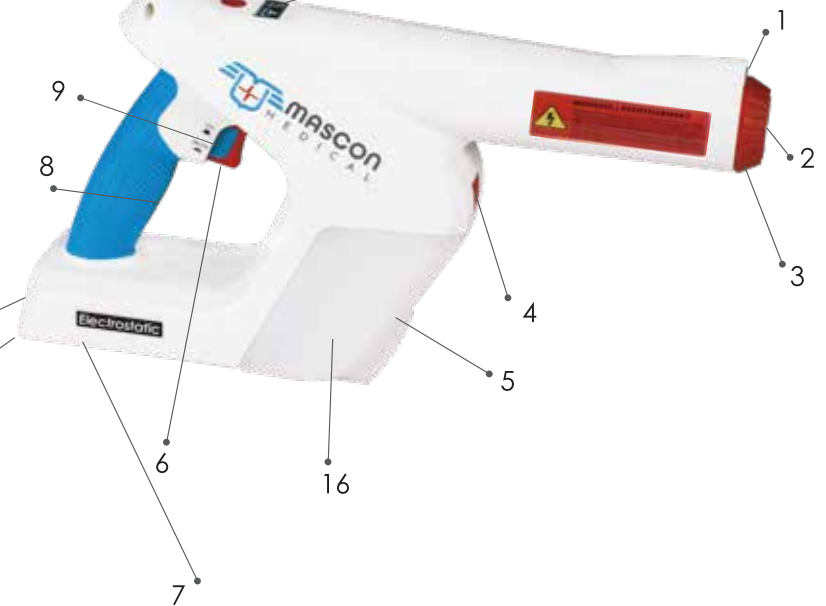

## 6. TECHNICAL PARAMETERS

Voltage	16.8V
Nozzle Spray Sizes	<b>40 Microns</b>
Charge Time	2 Hours
Optimum Spray Distance	★ <b>2.6-4 ft.</b>
Run Time	Charged - 3 Hrs Tank Only - 7-13 Minutes
Rated Power	13.5 W
Coverage Per Tank	1600 sq. ft.
Coverage Per Charge	16000 sq. ft
Decibels	<60dB
Electrostatic Function	10,000V
HMI	LCD Display
Size	405x207x90mm
Weight Full	3.5LB (1.6Kg)
Tank Capacity	17oz (500ml)

### KNOW YOUR SPRAYER:

The safe use of this product requires an understanding of the information on the product and in this operator's manual as well as a knowledge of the task you are attempting. Before use of this product, familiarize yourself with all operating features and safety rules.

### PUMP-FREE SPRAYING:


The battery-powered sprayer keeps fluid continuously cycling through the tank to allow pump-free spraying.

### TANK:

The tank is marked for measuring up to 500 ml (17 oz.) of liquid.



## 7. ELECTROSTATIC WORKING PRINCIPLE

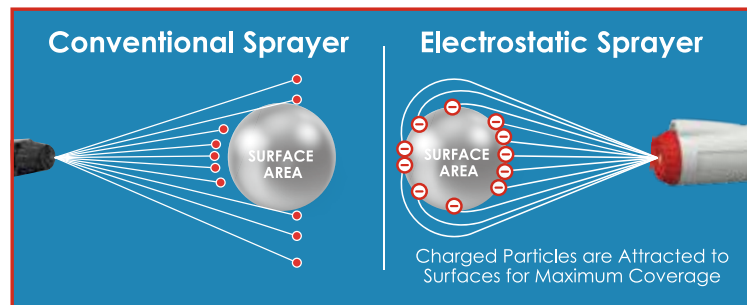

(most inanimate objects are positively charged)

Electrostatic spray technology is a process that uses an electrical charge to charge disinfectant liquid particles with a negative charge to allow the disinfectants to wrap around and evenly coat all types of surfaces for a more complete, deeper clean and thorough coverage.

**IMPORTANT:** You must allow disinfectant to completely dry on the surface. No need to wipe. Please refer to the disinfectant instructions and manual for surface kill times.



## 8. OPERATING INSTRUCTIONS

To start the sprayer gun, you first need to charge the battery pack. There are two ways to charge:

1. Charge the sprayer gun directly: insert the battery pack (15) into the battery holder of the sprayer gun, and insert the DC plug of the charger (14) to the DC jack (12).
2. Charge the single battery pack (15): insert the DC plug of the charger (14) to the DC jack (12) and plug directly into wall socket. When the charge begins, the indicator light on the charger will be red. When the charge is complete this light will turn green.



3. Before filling the tank (5), first remove it from the unit by pressing the tank release button (4) **Note:** you must hold on to the tank when release the tank from the unit or it may fall to the floor.



4. Fill the tank with the desired liquid disinfectant.



5. When reinstalling the tank, first put the water tube (16) into the tank, then push the tank up along the wall of the unit until it is locked.



6. Insert the charged battery(15) into the battery socket (7) and lock it in place. (if you charged the battery while still in the unit, you can skip this process)



7. Pull the trigger switch (6) and spray on your desired surface, always keep your hand firmly wrapped around the handle to insure maximized electrostatic performance contact with the grounding strap. (8)



MASCON  
MEDICAL

## 9. CHANGING THE NOZZLES



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5

1. Press the battery release button (13) and remove the battery pack from the unit. **(Figure 1)**
2. Turn nozzle cover (3) counterclockwise 30 °, it will separate from the head of the unit. **(Figure 2)**
3. Inside the nozzle cover, there is one additional nozzle a 40um nozzle. **(Figure 3)**
4. After selecting your preferred nozzle, remove the white casting from the nozzle **(Figure 4)** and remove the existing nozzle from the machine by turning counterclockwise. Replace with selected nozzle and tighten clockwise onto the machine.
5. After the nozzle change is complete affix the nozzle cover back onto the machine by rotating it clockwise 30 degrees until the arrow on the nozzle cover aligns with the arrow on the main unit. **(Figure 5)**



MASCON  
MEDICAL

## 10. SAFETY LOCK INSTRUCTIONS

1. To disengage the safety lock (9) push the blue section on the trigger switch (6).
2. When spraying is complete or you place the machine down for any reason, ensure the safety lock is re-engaged by pressing once again the blue section on the trigger switch. This will lock the trigger meaning the spray cannot be released. This is especially important when being used around children.  
(Pictured Right)



## 11. ENABLING ELECTROSTATIC SPRAYING







1. To turn on electrostatic spraying, press down on the Electrostatic switch (10) until it is engaged. The LCD display (11) will show the electrostatic symbol and battery status.  
(Pictured Left)

2. To turn off electrostatic spraying, depress the Electrostatic Switch. The electrostatic function and LCD display will both be turned off.

## 12. SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product.

<b>DANGER</b>		Indicates a hazardous situation, which, if not avoided, will result in death or serious injury.
<b>WARNING</b>		Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.
<b>CAUTION</b>		Indicates a hazardous situation, that, if not avoided, may result in minor or moderate injury.
<b>NOTICE</b>		(Without Safety Alert Symbol) Indicates information considered important, but not related to a potential injury (e.g., messages relating to property damage).
<b>FIRE HAZARD</b>		Risk of Fire/Explosion, which if not avoided, may cause injury or death.



## 13. OPERATION SAFETY

### NOTICE:

Periodically inspect the entire product for damaged, missing, or loose parts such as screws, nuts, bolts, caps, etc. Tighten securely all fasteners and caps and do not operate this product until all missing or damaged parts are replaced. Please contact customer service or a qualified service center for assistance.



### WARNING:

Always wear eye protection with side shields or goggles marked to comply with ANSI Z87.1. Failure to do so could result in fluids entering your eyes resulting in possible serious injury.



### WARNING:

Do not allow familiarity with this product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.



### WARNING:

Always remove battery pack from the tool when you are assembling parts, making adjustments, cleaning, or when not in use. Removing battery pack will prevent accidental starting that could cause serious personal injury. Turn electrostatic



### WARNING:

Always follow the chemical manufacturer's instructions printed on their product labeling for use, cleaning, and storage. Do not combine chemicals. Clean thoroughly after each use, following the instructions in the Maintenance section of this manual. Chemicals should be stored out of the reach of children. Failure to do so may result in serious personal injury.



### WARNING:

Use safety equipment. Protect your eyes, skin, and lungs while mixing, filling, spraying, and cleaning. Failure to do so may result in serious personal injury and damage to property

### NOTICE:

Remove tank and fill away from sprayer. Clean the exterior of the tank and clean up any spillage before replacing tank.



### WARNING:

Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury.

### NOTICE:

Remove tank and fill away from sprayer. Clean the exterior of the tank and clean up any spillage before replacing tank.

When adding spray solutions, you may add water and the desired chemical solution directly into the tank or use a solution that has been premixed in a separate container, then poured into the sprayer, using a funnel if needed. For either method, remember:

Liquids used must be as thin as water. Thicker liquids will not spray properly.

Do not overfill the tank.

NOTE: If using a measuring container or funnel to fill the tank, be sure to thoroughly clean and rinse these items after use. If premixing the spraying solution, rinse the container used for mixing.

### NOTICE:

It is important to thoroughly clean the unit after each use. Allowing liquid to remain in an idle tool for an extended period may cause its moving pieces and connectors to seize up.

### USING THE ELECTROSTATIC FUNCTION:

This sprayer can be used with or without electrostatic charging. When the electrostatic feature is turned off, the droplets in the spray will remain inside the spray area until they are absorbed or wiped away. When the electrostatic feature is turned on, the droplets in the spray are given a positive electrical charge. Each charged droplet adheres to the surface being sprayed while simultaneously repelling and spreading apart from one another. As the droplets spread apart, they will expand beyond the spray area and cover more of the target surface. The droplets will maintain their distance until they are absorbed or wiped away.

NOTE: Turn the electrostatic feature off, if you want to concentrate a large amount of spray in a small area. Turn the electrostatic feature on, if you want to evenly apply product over a large area.



#### OPERATING TIPS:

- Never point the sprayer at yourself or others.
- Avoid spraying in windy areas. Spray can be accidentally blown onto plants or objects that should not be sprayed.
- Never spray in the direction of people or animals; always spray downwind.
- Never smoke, eat, or drink while operating the sprayer.
- Especially in warmer weather, use sprayer in the early morning or late afternoon. Excessive heat can evaporate the mist before it settles.



#### WARNING:

Before filling the tank, always remove the battery pack. Turn electrostatic function off before removing the battery from the unit. Wipe up any spills before inserting the battery pack. Following this rule will reduce the risk of electric shock and corrosive liquids entering the battery pack, which can cause battery pack failure including short circuit resulting in smoke, fire, and/or serious personal injury.



#### WARNING:

Always follow the chemical manufacturer's instructions printed on their product labeling for use, cleaning, and storage. Do not combine chemicals. Clean thoroughly after each use, following the instructions in the Maintenance section of this manual. Chemicals should be stored out of the reach of children. Failure to do so may result in serious personal injury.



#### WARNING:

Do not allow conductive or corrosive fluids to get inside the battery pack. If conductive or corrosive fluids are spilled on the battery, refer to the instructions in your battery operator's manual.

#### NOTICE:

Remove tank and fill away from sprayer. Clean the exterior of the tank and clean up any spillage before replacing tank.



## 14. CLEANING THE UNIT



#### WARNING:

Always store and dispose of chemicals properly. Disposal of contaminated rinse water should be performed according to local ordinances and bylaws.

#### CLEANING SPRAY GUN:

- Fill the water tank with 1/2 of the water, or add a small amount of mild household detergent
- Use up the water in the water tank according to the conventional spraying process.
- Remove the battery pack, remove the water tank and nozzle cover, and wipe the outside of the water tank and the nozzle cover with a dry cloth.
- After the product is dried, install the water tank and nozzle cover back to the spray gun



# 15. MAINTENANCE

## NOTICE:

Periodically inspect the entire product for damaged, missing, or loose parts such as screws, nuts, bolts, caps, etc. Tighten securely all fasteners and caps and do not operate this product until all missing or damaged parts are replaced. Please contact customer service or a qualified service center for assistance.



### WARNING:

To avoid serious personal injury, always remove the battery pack from the tool when cleaning or performing any maintenance.



### WARNING:

Always wear eye protection with side shields or goggles marked to comply with ANSI Z87.1. Failure to do so could result in fluids entering your eyes resulting in possible serious injury.



### WARNING:

When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage.

## GENERAL MAINTENANCE:

Periodically inspect the entire product for damaged, missing, or loose parts such as screws, nuts, bolts, caps, etc. Tighten securely all fasteners and caps and do not operate this product until all missing or damaged parts are replaced. Please contact customer service or a qualified service center for assistance.

- Do not pour hot or boiling liquid into the water tank, this can damage the tank
- Do not use bleach or hydrogen peroxide
- Do not use corrosive liquids
- If any liquid remains in the water tank after spraying, please use it up as soon as possible.
- Clean the Spray Gun after use.
- Please store the Spray Gun in a safe, well-ventilated space, and keep the water tank empty.

## STORING THE SPRAYER:

- Remove the battery pack from the sprayer before storing.
- Empty all fluid from the tank as described previously in Cleaning the Unit.
- Keep away from corrosive agents such as garden chemicals and de-icing salts.
- Store indoors in a place that is inaccessible to children
- Store in an upright position
- Recommended storage temperature 0-30 °C

## 16. ASSEMBLY



**WARNING:**

Do not use this product if it is not completely assembled or if any parts appear to be missing or damaged. Use of a product that is not properly and completely assembled or with damaged or missing parts could result in serious personal injury.



**WARNING:**

Do not attempt to modify this product or create accessories or attachments not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

Do not discard the packing material until you have carefully inspected and satisfactorily operated the product. If any parts are damaged or missing, please call 1-800-858-5289 for assistance.

## 17. PACKING LIST

No.	Item	Specification	Qty	Remarks
1	Sprayer		1	
2	Battery		1	
3	Charger		1	
4	User Manual		1	
5	Warranty Card		1	
6	Nozzles	1 x 40 micron already installed 1 x spare 40 micron	2	